

The ExpoDisc™

The White Balance Solution For Digital Cameras and Digital Video.

ExpoDisc™ QUICK START

Before using your new ExpoDisc Digital White Balance Filter, please refer to your camera manual on how to set a custom white balance.

IMPORTANT: Do not point your camera at the sun. Direct sunlight will damage or destroy your camera's image sensor.

To install and remove the ExpoDisc:

Push the ExpoDisc over the threaded recesses in front of your camera lens so that the plain white side faces the camera. To remove the ExpoDisc, simply reverse this action.

ExpoDisc General Instructions for Use:

Navigate thru your camera's menus and select the custom white balance setting, among the choices should be auto, incandescent, fluorescent, daylight, flash, cloudy, shade, and the custom white balance setting. Put the ExpoDisc on your lens, set your focus to manual (your camera may not respond in auto focus with the disc installed), aim your camera to measure the incident, or dominant light falling on your subject, and click the shutter release. Then select, or save this measurement for your custom white balance setting.

If you have a compact camera that doesn't accept filters, you can simply hold the filter up to the front of the lens while taking a shot. Remember to set another custom white balance if the lighting changes.

1. Put the ExpoDisc on your lens.
2. Set the exposure using preferred method.
3. Set focus mode to manual.
4. Put camera in Custom WB mode.
5. Point the camera as if to measure the incident, or dominant light falling on the subject and click the shutter release button.
6. Select, or save this measurement as the Custom WB.
7. Set focus mode back to Auto (if desired).
8. Remove the ExpoDisc from your lens, and start shooting.

*Repeat this procedure whenever there is a change in the lighting condition.

How to Reach Us:

Customer Service: (408) 778-2040 (Monday thru Friday, 8am – 5pm PST)